




# Electrolux



[electrolux.com/register](https://electrolux.com/register)

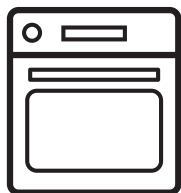

EN User Manual | **Steam oven**



EOC6H76X

EOC6H76Z

LOC6H76Z



# INSTALLATION

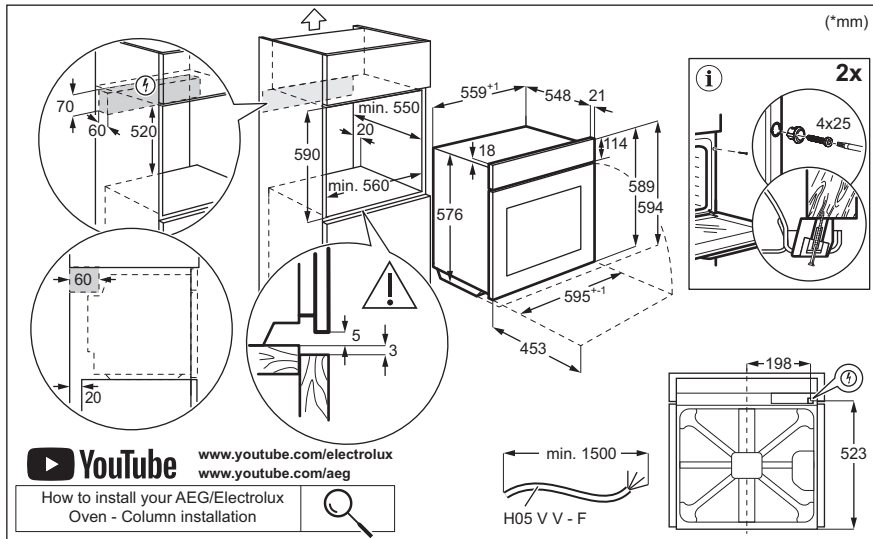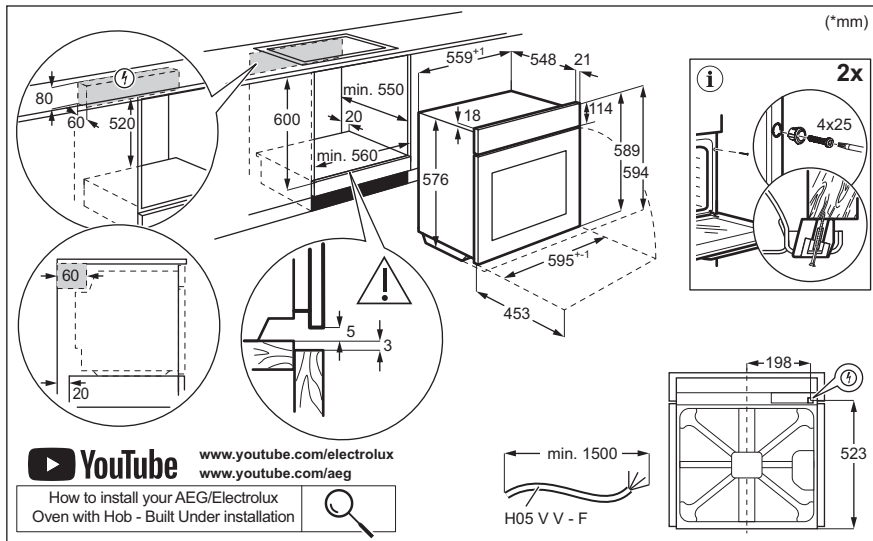

# Welcome to Electrolux! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:  
[www.electrolux.com/support](http://www.electrolux.com/support)

Subject to change without notice.

## CONTENTS

|                                 |    |
|---------------------------------|----|
| 1. SAFETY INFORMATION.....      | 3  |
| 2. SAFETY INSTRUCTIONS.....     | 5  |
| 3. PRODUCT DESCRIPTION.....     | 7  |
| 4. CONTROL PANEL.....           | 8  |
| 5. BEFORE FIRST USE.....        | 9  |
| 6. DAILY USE.....               | 9  |
| 7. ADDITIONAL FUNCTIONS.....    | 14 |
| 8. CLOCK FUNCTIONS.....         | 15 |
| 9. USING THE ACCESSORIES.....   | 16 |
| 10. HINTS AND TIPS.....         | 17 |
| 11. CARE AND CLEANING.....      | 19 |
| 12. TROUBLESHOOTING.....        | 22 |
| 13. ENERGY EFFICIENCY.....      | 23 |
| 14. ENVIRONMENTAL CONCERNS..... | 24 |

## 1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### 1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## **1.2 General Safety**

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Only a qualified person must install this appliance and replace the cable.
- Do not use the appliance before installing it in the built-in structure.
- Disconnect the appliance from the power supply before carrying out any maintenance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements or the surface of the appliance cavity.
- Always use oven gloves to remove or insert accessories or ovenware.

- Use only the food sensor (core temperature sensor) recommended for this appliance.
- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation



#### **WARNING!**

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions available on our website.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Keep the minimum distance from other appliances and units.
- Before mounting the appliance, check if the appliance door opens without restraint.
- The appliance is equipped with an electric cooling system. It must be operated with the electric power supply.

### 2.2 Electrical connection



#### **WARNING!**

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the

electrical ratings of the mains power supply.

- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

- This appliance is supplied with a main plug and a main cable.

#### **Cable types applicable for installation or re- placement for Europe:**

H07 RN-F, H05 RN-F, H05 RRF, H05 VV-F, H05 V2V2-F (T90), H05 BB-F

For the section of the cable refer to the total power on the rating plate. You can also refer to the table:

| <b>Total power (W)</b> | <b>Section of the cable (mm<sup>2</sup>)</b> |
|------------------------|----------------------------------------------|
| maximum 1380           | 3x0.75                                       |
| maximum 2300           | 3x1                                          |
| maximum 3680           | 3x1.5                                        |

The earth cord (green / yellow cable) must be 2 cm longer than the brown phase and blue neutral cables.

## **2.3 Use**



#### **WARNING!**

Risk of injury, burns and electric shock or explosion.

- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Always use glass and jars approved for preserving purposes.

- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



#### **WARNING!**

Risk of damage to the appliance.

- To prevent damage or discoloration to the enamel:
  - do not put ovenware or other objects in the appliance directly on the bottom.
  - do not put aluminium foil directly on the bottom of cavity of the appliance.
  - do not put water directly into the hot appliance.
  - do not keep moist dishes and food in the appliance after you finish the cooking.
  - be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- Always cook with the appliance door closed.
- If the appliance is installed behind a furniture panel (e.g. a door) make sure the door is never closed when the appliance operates. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the appliance, the housing unit or the floor. Do not close the furniture panel until the appliance has cooled down completely after use.

## **2.4 Care and cleaning**



#### **WARNING!**

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.

- Be careful when you remove the door from the appliance. The door is heavy!
- Clean regularly the appliance to prevent the deterioration of the surface material.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instructions on its packaging.

## 2.5 Steam Cooking

### ⚠ WARNING!

Risk of burns and damage to the appliance.

- Released Steam can cause burns:
  - Do not open the appliance door during the steam cooking operation.
  - Open the appliance door with care after the steam cooking operation.

## 2.6 Internal lighting

### ⚠ WARNING!

Risk of electric shock.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand

extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

- This product contains a light source of energy efficiency class G.
- Use only lamps with the same specifications.

## 2.7 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

## 2.8 Disposal


### ⚠ WARNING!

Risk of injury or suffocation.

- Contact your municipal authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

# 3. PRODUCT DESCRIPTION

## 3.1 General overview

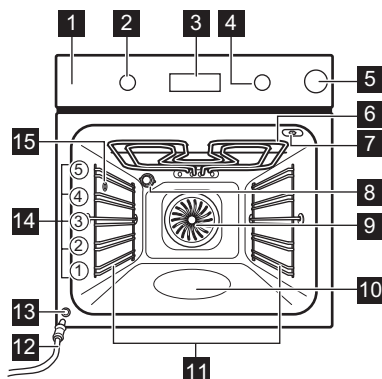

- 1 Control panel
- 2 Knob for the heating functions
- 3 Display
- 4 Control knob
- 5 Water drawer
- 6 Heating element
- 7 Socket for the food sensor
- 8 Lamp
- 9 Fan
- 10 Cavity embossment - Aqua cleaning container
- 11 Shelf support, removable
- 12 Draining pipe
- 13 Water outlet valve

**14** Shelf positions

**15** Steam outlet

**3.2 Accessories**

- **Wire shelf**  
For cake tins, ovenproof dishes, roast dishes, cookware / dishes.
- **Baking tray**  
For moist cakes, baked items, bread, large roasts, frozen meals and to catch dripping

liquids, e.g. fat when roasting food on wire shelf.

- **Grill- / Roasting pan**  
To bake and roast or as pan to collect fat.
- **Food Sensor**  
To control cooking based on the temperature inside the food.
- **Telescopic runners**  
For inserting and removing trays and wire shelf more easily.

**4. CONTROL PANEL**

**4.1 Turning the appliance on and off**

To turn on the appliance:


1. Press the knobs. The knobs come out.
2. Turn the knob for the heating functions to select a function.
3. Turn the control knob to adjust settings.

To turn off the appliance: turn the knob for the heating functions to the off position **0**.

**4.2 Control panel overview**

|                                                                                    |                                                          |
|------------------------------------------------------------------------------------|----------------------------------------------------------|
|   | Press to set timer functions.                            |
|   | Press and hold to set the function: Fast Heat Up.        |
|   | Press to turn the appliance lamp on and off.             |
|  | Press to set the food core temperature with: Food Sensor |
| <b>OK</b>                                                                          | Press to confirm your selection.                         |

**4.3 Display indicators**

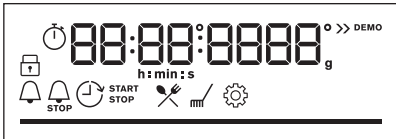

Display with key functions.

|                                                                                     |                                                                                                                            |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
|    | The appliance is locked.                                                                                                   |
|    | Submenu: Assisted Cooking.                                                                                                 |
|    | Submenu: Cleaning.                                                                                                         |
|    | Submenu: Settings                                                                                                          |
|    | Fast Heat Up is activated.                                                                                                 |
|    | The water tank is empty. Refill the tank.                                                                                  |
|    | The water tank is half full.                                                                                               |
|    | The water tank is full.                                                                                                    |
|    | Food Sensor is activated.                                                                                                  |
|    | Minute minder is activated.                                                                                                |
|   | Cooking time is activated.                                                                                                 |
|  | Time Delayed Start is activated.                                                                                           |
|  | Uptimer is activated.                                                                                                      |
|  | Progress bar - visually indicates when the appliance reaches the set temperature or when the cooking time comes to an end. |



## 5. BEFORE FIRST USE

### **WARNING!**

Refer to Safety chapters.

### 5.1 Setting the time

After the first connection to the mains, wait until the display shows: **"00:00"**.

1. Turn the control knob to set the time.
2. Press **OK**.

### 5.2 Initial preheating and cleaning

Preheat the empty appliance before the first use and contact with food. The appliance can emit unpleasant smell and smoke. Ventilate the room during preheating.

1. Remove all accessories and removable shelf supports from the appliance.
2. Set the function . Set the maximum temperature. Let the appliance operate for 1 h.
3. Set the function . Set the maximum temperature. Let the appliance operate for 15 min.
4. Turn off the appliance and wait until it is cold.
5. Clean the appliance and the accessories only with a microfibre cloth, warm water and a mild detergent.
6. Put the accessories and removable shelf supports back to their initial position.

## 6. DAILY USE

### **WARNING!**

Refer to Safety chapters.

### 6.1 Heating functions



#### **True Fan Cooking**

To roast meat and bake cakes. Set a lower temperature than for Conventional Cooking as the fan distributes heat evenly in the oven interior.



#### **Conventional Cooking / Aqua Clean**

To bake and roast food on one shelf position. Refer to "Care and cleaning" chapter for more information about: Aqua Clean.



#### **Steam function: Humidity Low**

The function is suitable for meat, poultry, oven dishes and casseroles. Thanks to the combination of steam and heat, the meat gets a juicy and tender texture along with a crusty surface.



#### **Frozen Foods**

To make convenience food crispy, e.g. french fries, potato wedges or spring rolls.



#### **Pizza Function**

To bake pizza and other dishes that require more heat from below.



#### **Bottom Heat**

To make browning and crispy bottom. Use the lowest shelf position.



#### **Moist Fan Baking**

This function is designed to save energy during cooking. When you use this function, the temperature inside the appliance may differ from the set temperature. The residual heat is used. The heating power may be reduced. For more information refer to "Daily Use" chapter, Notes on: Moist Fan Baking.



#### **Grill**

To grill thin pieces of food and to toast bread.



#### **Turbo Grilling**

To roast large meat joints or poultry with bones on one shelf position. To bake gratins and to brown.



The lamp may turn off automatically at a temperature below 80 °C during some heating functions.

### 6.2 Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and

EU 66/2014). Tests according to: IEC/EN 60350-1.

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.

For the cooking instructions refer to "Hints and tips" chapter, Moist Fan Baking. For general energy saving recommendations refer to "Energy Efficiency" chapter, Energy saving tips.

### 6.3 Setting: Heating functions

1. Turn the knob for the heating functions to select a heating function.
2. Turn the control knob to set the temperature.

### 6.4 Setting: Humidity Low - Steam cooking



Use only water. Do not use filtered (demineralised) or distilled water. Do not use other liquids. Do not put flammable or alcoholic liquids into the water tank.

1. Press the cover of the water tank to open it.
2. Fill the water tank with cold water to the maximum level (around 900 ml).
3. Push the water tank to its initial position.
4. Insert the food in the appliance.
5. Turn the knob for the heating functions to select the heating function .
6. Turn the control knob to set the temperature. Refill the water tank during cooking, if needed.
7. When the cooking ends, turn the knob for the heating functions to the off position to turn off the appliance. Carefully open the door. Released humidity can cause burns.
8. Empty the water tank after each steam cooking to prevent limestone residue. Wait for at least 60 min after each use to prevent hot water from exiting the water outlet valve.

#### **WARNING!**

The appliance is hot. There is a risk of burns. Be careful when you empty the water tank.

### 6.5 Emptying water tank

#### Water tank indicator



The tank is full.




The tank is half full.



The tank is empty. Refill the tank.

If you put too much water into the tank, the safety outlet moves the excess water to the bottom of the oven interior.

1. Turn off the appliance. Leave the oven door open and wait until the appliance is cold.
2. Connect the draining pipe **C** to the outlet valve **A** through the connector **B**.

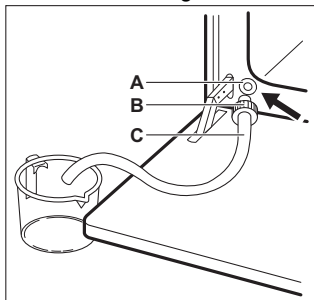

3. Keep the end of the pipe below the level of **A** and push **B** repeatedly to collect remaining water.
4. Detach **C** and **B** and dry the oven interior with a soft sponge.



Do not use the drained water to fill the water tank again.

### 6.6 Entering: Menu

Open the Menu to access Assisted Cooking dishes and settings.

1. Turn the knob for the heating functions to .  
The display shows , , , .
2. Turn the control knob and select the icon to enter submenu. Press **OK**.

## 6.7 Setting: Assisted Cooking

Assisted Cooking submenu consists of programmes that are designed for dedicated dishes. Programmes start with a suitable setting. You can adjust the time and the temperature during cooking.

1. Turn the knob for the heating functions to .
2. Turn the control knob to select . Press **OK**.
3. Turn the control knob to select a dish (P1 - P... ). Press **OK**.
4. Place the food inside the appliance. Press **OK**.

5. When the function ends, check if the food is ready. Extend the cooking time, if needed.

### Submenu: Assisted Cooking

| Legend                                                                            |                                                                                                       |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  | Food sensor must be connected in order to use the function. Refer to "Using the accessories" chapter. |
|  | Fill the water drawer with water for steam cooking.                                                   |
|  | Preheat the appliance before you start cooking.                                                       |
|  | Shelf level. Refer to "Product description" chapter.                                                  |

The display shows **P** and a **number** of the dish that you can check in the table.

| Dish      |                                                          | Weight                                   | Shelf level / Accessory                                                                                                                                                                                                                                                                                                                                              |
|-----------|----------------------------------------------------------|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>P1</b> | Roast Beef, rare                                         |                                          |                                                                                                                                                                                                                                                                                                                                                                      |
| <b>P2</b> | Roast Beef, medium                                       | 1 - 1.5 kg; 4 - 5 cm thick pieces        |   <b>2; baking tray</b><br>Fry the meat for a few minutes in a hot pan. Insert to the appliance.                                                                                                   |
| <b>P3</b> | Roast Beef, well done                                    |                                          |                                                                                                                                                                                                                                                                                                                                                                      |
| <b>P4</b> | Steak, medium                                            | 180 - 220 g per piece; 3 cm thick slices |    <b>3; roasting dish on wire shelf</b><br>Fry the meat for a few minutes in a hot pan. Insert to the appliance. |
| <b>P5</b> | Beef roast / braised (prime rib, top round, thick flank) | 1.5 - 2 kg                               |   <b>2; roasting dish on wire shelf</b><br>Fry the meat for a few minutes in a hot pan. Add liquid. Insert to the appliance.                                                                   |
| <b>P6</b> | Roast Beef, rare (slow cooking)                          |                                          |                                                                                                                                                                                                                                                                                                                                                                      |
| <b>P7</b> | Roast Beef, medium (slow cooking)                        | 1 - 1.5 kg; 4 - 5 cm thick pieces        |   <b>2; baking tray</b><br>Fry the meat for a few minutes in a hot pan. Insert to the appliance.                                                                                               |
| <b>P8</b> | Roast Beef, well done (slow cooking)                     |                                          |                                                                                                                                                                                                                                                                                                                                                                      |

|     | Dish                                   | Weight                                      | Shelf level / Accessory                                                                                                                                                                                                                                                                                                                         |
|-----|----------------------------------------|---------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P9  | Fillet of beef, rare<br>(slow cooking) |                                             |                                                                                                                                                                                                                                                                                                                                                 |
| P10 | Fillet of beef, medium (slow cooking)  | 0.5 - 1.5 kg; 5 - 6 cm thick pieces         |   <b>2; baking tray</b><br>Fry the meat for a few minutes in a hot pan. Insert to the appliance.                                                                              |
| P11 | Fillet of beef, done<br>(slow cooking) |                                             |                                                                                                                                                                                                                                                                                                                                                 |
| P12 | Veal roast (e.g. shoulder)             | 0.8 - 1.5 kg; 4 cm thick pieces             |   <b>2; roasting dish on wire shelf</b><br>Add liquid. Roast covered.                                                                                                         |
| P13 | Pork roast neck or shoulder            | 1.5 - 2 kg                                  |   <b>1; roasting dish on wire shelf</b><br>Turn the meat after half of the cooking time.                                                                                      |
| P14 | Pulled pork (slow cooking)             | 1.5 - 2 kg                                  |   <b>2; baking tray</b><br>Turn the meat after half of the cooking time to get an even browning.                                                                              |
| P15 | Pork loin, fresh                       | 1 - 1.5 kg; 5 - 6 cm thick pieces           |   <b>2; roasting dish on wire shelf</b><br>Fry the meat for a few minutes in a hot pan. Insert to the appliance.                                                              |
| P16 | Pork spare ribs                        | 2 - 3 kg; use raw, 2 - 3 cm thin spare ribs |  <b>3; deep pan</b><br>Add liquid to cover the bottom of a dish. Turn the meat after half of the cooking time.                                                                                                                                                 |
| P17 | Lamb leg with bones                    | 1.5 - 2 kg; 7 - 9 cm thick pieces           |   <b>2; roasting dish on baking tray</b><br>Add liquid. Turn the meat after half of the cooking time.                                                                         |
| P18 | Whole chicken                          | 1 - 1.5 kg; fresh                           |   <b>2; casserole dish on baking tray</b><br>Turn the chicken after half of the cooking time to get an even browning.                                                         |
| P19 | Half chicken                           | 0.5 - 0.8 kg                                |   <b>3; baking tray</b>                                                                                                                                                       |
| P20 | Chicken breast                         | 180 - 200 g per piece                       |    <b>2; casserole dish on wire shelf</b><br>Fry the meat for a few minutes in a hot pan. |
| P21 | Chicken legs, fresh                    | -                                           |   <b>3; baking tray</b><br>If you marinated chicken legs first, set lower temperature and cook them longer.                                                               |
| P22 | Duck, whole                            | 2 - 3 kg                                    |   <b>2; roasting dish on wire shelf</b><br>Put the meat on roasting dish. Turn the duck after half of the cooking time.                                                   |
| P23 | Goose, whole                           | 4 - 5 kg                                    |   <b>2; deep pan</b><br>Put the meat on deep baking tray. Turn the goose after half of the cooking time.                                                                  |
| P24 | Meat loaf                              | 1 kg                                        |   <b>2; wire shelf</b>                                                                                                                                                    |

|     | Dish                                           | Weight              | Shelf level / Accessory                                                                                                                                                                                          |
|-----|------------------------------------------------|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P25 | Whole fish, grilled                            | 0.5 - 1 kg per fish |  2; <b>baking tray</b><br>Fill the fish with butter, spices and herbs.                                                          |
| P26 | Fish fillet                                    | -                   |  3; casserole dish on <b>wire shelf</b>                                                                                         |
| P27 | Cheesecake                                     | -                   |  2;  28 cm springform tin on <b>wire shelf</b> |
| P28 | Apple cake                                     | -                   |  3; <b>baking tray</b>                                                                                                          |
| P29 | Apple tart                                     | -                   |  2; pie form on <b>wire shelf</b>                                                                                               |
| P30 | Apple pie                                      | -                   |  1;  22 cm pie form on <b>wire shelf</b>       |
| P31 | Brownies                                       | 2 kg of dough       |  3; <b>deep pan</b>                                                                                                             |
| P32 | Muffins                                        | -                   |  3; muffin tray on <b>wire shelf</b>                                                                                            |
| P33 | Loaf cake                                      | -                   |  2; loaf pan on <b>wire shelf</b>                                                                                               |
| P34 | Baked potatoes                                 | 1 kg                |  2; <b>baking tray</b><br>Put the whole potatoes with skin on baking tray.                                                      |
| P35 | Wedges                                         | 1 kg                |  3; <b>baking tray</b> lined with baking paper<br>Cut potatoes into pieces.                                                     |
| P36 | Grilled mixed vegetables                       | 1 - 1.5 kg          |  3; <b>baking tray</b> lined with baking paper<br>Cut the vegetables into pieces.                                               |
| P37 | Croquettes, frozen                             | 0.5 kg              |  3; <b>baking tray</b>                                                                                                          |
| P38 | Pommes, frozen                                 | 0.75 kg             |  3; <b>baking tray</b>                                                                                                          |
| P39 | Meat / vegetable lasagna with dry pasta sheets | 1 - 1.5 kg          |  1; casserole dish on <b>wire shelf</b>                                                                                         |
| P40 | Potato gratin (raw potatoes)                   | 1 - 1.5 kg          |  1; casserole dish on <b>wire shelf</b><br>Rotate the dish after half of the cooking time.                                    |
| P41 | Pizza fresh, thin                              | -                   |  2; <b>baking tray</b> lined with baking paper                                                                                |
| P42 | Pizza fresh, thick                             | -                   |  2; <b>baking tray</b> lined with baking paper                                                                                |
| P43 | Quiche                                         | -                   |  2; baking tin on <b>wire shelf</b>                                                                                           |
| P44 | Baguette / Ciabatta / White bread              | 0.8 kg              |  2; <b>baking tray</b> lined with baking paper<br>More time needed for white bread.                                           |
| P45 | Whole grain / Rye / Dark bread                 | 1 kg                |  2; <b>baking tray</b> lined with baking paper / loaf pan on <b>wire shelf</b>                                                |

## 6.8 Changing: Settings

1. Turn the knob for the heating functions to .
2. Turn the control knob to select . Press **OK**.
3. Turn the control knob to select the setting. Press **OK**.
4. Turn the control knob to adjust the value. Press **OK**.
5. Turn the knob for the heating functions to the off position to exit Menu.

Submenu: Settings

| Setting               | Value  |
|-----------------------|--------|
| 01 Time of day        | Change |
| 02 Display brightness | 1 - 5  |

| Setting               | Value                              |
|-----------------------|------------------------------------|
| 03 Key tones          | 1 - Beep, 2 - Click, 3 - Sound off |
| 04 Buzzer volume      | 1 - 4                              |
| 05 Food Sensor Action | 1 - Alarm and stop, 2 - Alarm      |
| 06 Uptimer            | On / Off                           |
| 07 Light              | On / Off                           |
| 08 Fast Heat Up       | On / Off                           |
| 09 Demo mode          | Activation code: 2468              |
| 10 Software version   | Check                              |
| 11 Reset all settings | Yes / No                           |

## 7. ADDITIONAL FUNCTIONS

### 7.1 Lock

This function prevents an accidental change of the appliance function.

When activated while the appliance is in use, it locks the control panel, ensuring that the current cooking settings continue uninterrupted.

When activated while the appliance is off, it keeps the control panel locked, preventing the appliance from being turned on unintentionally.

 **OK** - press and hold to turn on the function.

A signal sounds.  - flashes 3 times when the lock is turned on.

 **OK** - press and hold to turn off the function.

### 7.2 Automatic switch-off

For safety reasons, if the heating function is active and no settings are changed, the appliance will turn off automatically after a certain period of time.

|  (°C) |  (h) |
|----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 30 - 115                                                                               | 12.5                                                                                  |
| 120 - 195                                                                              | 8.5                                                                                   |
| 200 - 245                                                                              | 5.5                                                                                   |
| 250 - maximum                                                                          | 3                                                                                     |

If you intend to run a heating function for a duration exceeding the automatic switch-off time, set the cooking time. Refer to the 'Clock functions' chapter.

The Automatic switch-off does not work with the functions: Light, Food Sensor, Time Delayed Start.

### 7.3 Cooling fan

When the appliance operates, the cooling fan turns on automatically to keep the surfaces of the appliance cool. If you turn off the appliance, the cooling fan can continue to operate until the appliance cools down.

## 8. CLOCK FUNCTIONS

### 8.1 Timer functions description

|                                                                                                                |                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>Minute minder</b>      | To set a countdown timer. When the timer ends, the signal sounds. This function has no effect on the operation of the appliance and can be set at any time. |
| <br><b>Cooking time</b>       | To set cooking duration. When the timer ends, the signal sounds and the heating function will automatically turn off.                                       |
| <br><b>Time Delayed Start</b> | To postpone the start and / or end of cooking.                                                                                                              |
| <br><b>Uptimer</b>            | To show how long the appliance operates. Maximum is 23 h 59 min. This function has no effect on the operation of the appliance and can be set at any time.  |

### 8.2 Setting: Minute minder

1. Press .

The display shows: 0:00 and .

2. Turn the control knob to set the Minute minder.
3. Press **OK**. The timer starts counting down immediately.

### 8.3 Setting: Cooking time

1. Turn the knobs to select the heating function and to set the temperature.
2. Press  until the display shows: 0:00 and .
3. Turn the control knob to set the Cooking time.
4. Press **OK**. The timer starts counting down immediately.
5. When the time ends, press **OK** and turn the knob for the heating functions to the off position.

### 8.4 Setting: Time Delayed Start

1. Turn the knobs to select the heating function and to set the temperature.
2. Press  until the display shows:  and **START**.
3. Turn the control knob to set the start time.
4. Press **OK**.

The display shows: --:--  **STOP**.

5. Turn the control knob to set the end time.
6. Press **OK**.  
The timer starts counting down at a set start time.
7. When the time ends, press **OK** and turn the knob for the heating functions to the off position.

### 8.5 Setting: Uptimer

1. Turn the knob for the heating functions to  to enter Menu.
2. Turn the control knob to select  / Uptimer. Refer to "Daily Use" chapter, Menu: Settings.
3. Press **OK**.
4. Turn the control knob to turn the Uptimer on and off.
5. Press **OK**.

### 8.6 Setting: Time of day

1. Turn the knob for the heating functions to  to enter Menu.
2. Turn the control knob to select  / Time of day. Refer to "Daily use" chapter, Menu: Settings.
3. Turn the control knob to set the clock.
4. Press **OK**.

## 9. USING THE ACCESSORIES


### **WARNING!**

Refer to Safety chapters.

### 9.1 Inserting accessories


A small indentation at the top increases safety and provides tilt protection. The indentations are also anti-tip devices. The rim around the shelf prevents cookware from slipping off the shelf.

#### Wire shelf

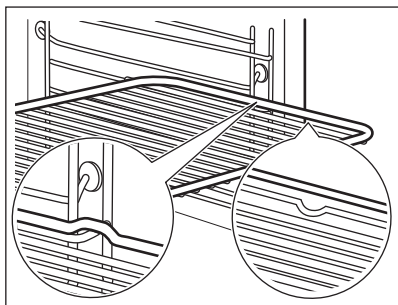

Insert the shelf between the guide bars of the shelf support and make sure that the feet point down. Make sure that the shelf touches the back of the oven interior.

#### Baking tray / Deep pan

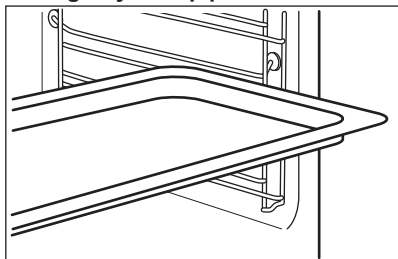

Push the tray between the guide bars of the shelf support. Place the baking tray with the slope towards the back of the oven interior.

### 9.2 Food Sensor

It measures the temperature inside the food.

There are two temperatures to be set:


- $^{\circ}\text{C}$  - the temperature inside the appliance. It should be at least  $25^{\circ}\text{C}$  higher than the food core temperature.
  -  - the food core temperature.
- For the best cooking results:
- Ingredients should be at room temperature.
  - Do not use it for liquid dishes.
  - During cooking the needle of the food sensor must be fully inserted in the dish.

### Cooking with: Food Sensor

#### **WARNING!**

There is a risk of burns as Food Sensor and shelf supports become hot. Do not touch Food Sensor handle with bare hands. Always use oven gloves.


1. Turn on the appliance.
2. Set a heating function and, if necessary, the oven temperature.
3. Insert Food Sensor inside the dish:  
**Meat, poultry and fish**  
Insert the entire needle of the Food Sensor into the meat or fish at its thickest part.

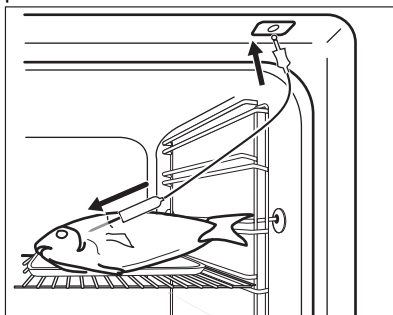

#### **Casserole**

Insert the tip of Food Sensor exactly in the centre of the casserole. Food Sensor should be stabilized in one place during cooking. Use a solid ingredient to achieve that. Use the rim of the baking dish to support the silicone handle of Food Sensor. The tip of Food Sensor should not touch the bottom of a baking dish.



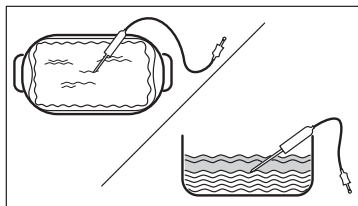

4. Plug Food Sensor into the socket located inside the appliance. Refer to "Product description" chapter.

The display shows the current temperature of Food Sensor.

5.  - press to set the core temperature of the sensor.

6. Turn the control knob to set the temperature.
7. Press OK.
8. When the food reaches the set temperature, the signal sounds. Check if the food is ready. Extend the cooking time, if needed.
9. Remove Food Sensor plug from the socket and remove the dish from the appliance.

## 10. HINTS AND TIPS

### 10.1 Cooking recommendations

The temperature and cooking times in the tables are for guidance only. They depend on the recipes, quality and quantity of the ingredients used.

Your appliance may bake or roast differently than your previous appliance. The hints below show recommended settings for temperature, cooking time and shelf position for specific types of the food.

Count the shelf positions from the bottom of the oven floor.

If you cannot find the settings for a specific recipe, look for a similar one.

For energy saving tips refer to "Energy efficiency" chapter.

#### Symbols used in the tables:

|                                                                                     |                  |
|-------------------------------------------------------------------------------------|------------------|
|  | Food type        |
|  | Heating function |
|  | Temperature      |

|                                                                                   |                    |
|-----------------------------------------------------------------------------------|--------------------|
|  | Accessory          |
|  | Shelf position     |
|  | Cooking time (min) |

### 10.2 Moist Fan Baking - recommended accessories

Use dark and non-reflective tins and containers. They have better heat absorption than light colour and reflective dishes.

- **Pizza pan** - dark, non-reflective, diameter 28cm
- **Baking dish** - dark, non-reflective, diameter 26cm
- **Ramekins** - ceramic, diameter 8cm, height 5 cm
- **Flan base tin** - dark, non-reflective, diameter 28cm

### 10.3 Moist Fan Baking

For the best results follow suggestions listed in the table below.

|                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |  |  |
| Sweet rolls, 16 pieces                                                              | baking tray or dripping pan                                                         | 180                                                                                 | 2                                                                                   | 20 - 30                                                                             |

|  |  | °C  |  |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Rolls, 9 pieces                                                                   | baking tray or dripping pan                                                       | 180 | 2                                                                                 | 30 - 40                                                                           |
| Pizza, frozen, 0.35 kg                                                            | wire shelf                                                                        | 220 | 2                                                                                 | 10 - 15                                                                           |
| Swiss Roll                                                                        | baking tray or dripping pan                                                       | 170 | 2                                                                                 | 25 - 35                                                                           |
| Brownie                                                                           | baking tray or dripping pan                                                       | 175 | 3                                                                                 | 25 - 30                                                                           |
| Soufflé, 6 pieces                                                                 | ceramic ramekins on wire shelf                                                    | 200 | 3                                                                                 | 25 - 30                                                                           |
| Sponge flan base                                                                  | flan base tin on wire shelf                                                       | 180 | 2                                                                                 | 15 - 25                                                                           |
| Victoria sandwich                                                                 | baking dish on wire shelf                                                         | 170 | 2                                                                                 | 40 - 50                                                                           |
| Poached fish, 0.3 kg                                                              | baking tray or dripping pan                                                       | 180 | 3                                                                                 | 20 - 25                                                                           |
| Whole fish, 0.2 kg                                                                | baking tray or dripping pan                                                       | 180 | 3                                                                                 | 25 - 35                                                                           |
| Fish fillet, 0.3 kg                                                               | pizza pan on wire shelf                                                           | 180 | 3                                                                                 | 25 - 30                                                                           |
| Poached meat, 0.25 kg                                                             | baking tray or dripping pan                                                       | 200 | 3                                                                                 | 35 - 45                                                                           |
| Shashlik, 0.5 kg                                                                  | baking tray or dripping pan                                                       | 200 | 3                                                                                 | 25 - 30                                                                           |
| Cookies, 16 pieces                                                                | baking tray or dripping pan                                                       | 180 | 2                                                                                 | 20 - 30                                                                           |
| Macaroons, 24 pieces                                                              | baking tray or dripping pan                                                       | 180 | 2                                                                                 | 25 - 35                                                                           |
| Muffins, 12 pieces                                                                | baking tray or dripping pan                                                       | 170 | 2                                                                                 | 30 - 40                                                                           |
| Savory pastry, 20 pieces                                                          | baking tray or dripping pan                                                       | 180 | 2                                                                                 | 25 - 30                                                                           |
| Short crust biscuits, 20 pieces                                                   | baking tray or dripping pan                                                       | 150 | 2                                                                                 | 25 - 35                                                                           |
| Tartlets, 8 pieces                                                                | baking tray or dripping pan                                                       | 170 | 2                                                                                 | 20 - 30                                                                           |
| Vegetables, poached, 0.4 kg                                                       | baking tray or dripping pan                                                       | 180 | 3                                                                                 | 35 - 45                                                                           |
| Vegetarian omelette                                                               | pizza pan on wire shelf                                                           | 200 | 3                                                                                 | 25 - 30                                                                           |
| Mediterranean vegetables, 0.7 kg                                                  | baking tray or dripping pan                                                       | 180 | 4                                                                                 | 25 - 30                                                                           |

## 10.4 Information for test institutes

Tests according to IEC 60350-1.

|  |  |  |  | °C        |  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|
| Small cakes, 20 per tray                                                            | Conventional Cooking                                                                | Baking tray                                                                         | 3                                                                                   | 170       | 20 - 35                                                                             |
| Small cakes, 20 per tray                                                            | True Fan Cooking                                                                    | Baking tray                                                                         | 3                                                                                   | 150 - 160 | 20 - 35                                                                             |
| Small cakes, 20 per tray                                                            | True Fan Cooking                                                                    | Baking tray                                                                         | 2 and 4                                                                             | 150 - 160 | 20 - 35                                                                             |
| Apple pie, 2 tins Ø20 cm                                                            | Conventional Cooking                                                                | Wire shelf                                                                          | 2                                                                                   | 180       | 70 - 90                                                                             |

|  |  |  |  | °C        |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------|-----------------------------------------------------------------------------------|
| Apple pie, 2 tins Ø20 cm                                                          | True Fan Cooking                                                                  | Wire shelf                                                                        | 2                                                                                 | 160       | 70 - 90                                                                           |
| Fatless sponge cake, cake mould Ø26 cm <sup>1)</sup>                              | Conventional Cooking                                                              | Wire shelf                                                                        | 2                                                                                 | 170       | 40 - 50                                                                           |
| Fatless sponge cake, cake mould Ø26 cm <sup>1)</sup>                              | True Fan Cooking                                                                  | Wire shelf                                                                        | 2                                                                                 | 160       | 40 - 50                                                                           |
| Fatless sponge cake, cake mould Ø26 cm <sup>1)</sup>                              | True Fan Cooking                                                                  | Wire shelf                                                                        | 2 and 4                                                                           | 160       | 40 - 60                                                                           |
| Short bread                                                                       | True Fan Cooking                                                                  | Baking tray                                                                       | 3                                                                                 | 140 - 150 | 20 - 40                                                                           |
| Short bread                                                                       | True Fan Cooking                                                                  | Baking tray                                                                       | 2 and 4                                                                           | 140 - 150 | 25 - 45                                                                           |
| Short bread                                                                       | Conventional Cooking                                                              | Baking tray                                                                       | 3                                                                                 | 140 - 150 | 25 - 45                                                                           |
| Toast <sup>1)</sup>                                                               | Grill                                                                             | Wire shelf                                                                        | 4                                                                                 | max.      | 1 - 5                                                                             |

<sup>1)</sup> Preheat the appliance for 10 minutes.

## 11. CARE AND CLEANING

### WARNING!

Refer to Safety chapters.

### 11.1 Notes on cleaning

#### Cleaning Agents

- Clean the front of the appliance only with a microfibre cloth with warm water and a mild detergent. Clean and check the door gasket around the frame of the cavity.
- Use a cleaning solution to clean metal surfaces.
- Clean stains with a mild detergent.

#### Everyday Use

- Clean the interior of the appliance after each use. Fat accumulation or other residue may cause fire.
- Moisture can condense in the appliance or on the door glass panels. To decrease the condensation, let the appliance work for 10 minutes before cooking. Do not store food in the appliance for longer than 20 minutes. Dry the interior of the appliance only with a microfibre cloth after each use.

#### Accessories

- Clean all accessories after each use and let them dry. Use only a microfibre cloth


with warm water and a mild detergent. Do not clean the accessories in a dishwasher.

- Do not clean the non-stick accessories using abrasive cleaner or sharp-edged objects.

### 11.2 Removing the shelf supports

Remove the shelf supports to clean the appliance.

1. Turn off the appliance and wait until it is cold.
2. Pull the front of the shelf support away from the side wall.
3. Pull the rear end of the shelf support away from the side wall and remove it.

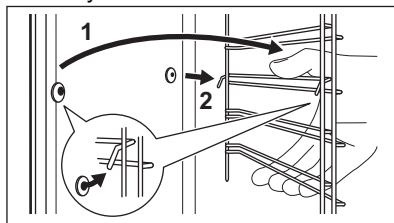

4. Install the shelf supports in the opposite sequence.

The retaining pins on the telescopic runners must point to the front.

### 11.3 Aqua Clean

This cleaning procedure uses humidity to remove remaining fat and food particles from the appliance.

1. Pour water into the cavity embossment: 300 ml.

2. Select Menu  / Cleaning 

3. Press OK.

**Duration:** 30 min

When the cleaning ends the signal sounds. The appliance turns off.

4. Wait until the appliance is cold. Dry the cavity with a soft cloth.

### 11.4 Cleaning the water tank

1. Turn off the appliance.
2. Place a deep pan below the steam inlet.
3. Pour water into the water drawer: 850 ml. Add citric acid: 5 teaspoons. Wait for 60 min.
4. Turn on the appliance and set the function: Humidity Low. Set the temperature to 230 °C.
5. Turn off the appliance after 25 min and wait until it is cold.
6. Turn on the appliance and set the function: Humidity Low. Set the temperature between 130 and 230 °C.
7. Turn off the appliance after 10 min and wait until it is cold.
8. Empty the water tank. Refer to Daily use, "Emptying water tank" chapter.
9. Rinse the water tank and clean the remaining limestone residue with a soft cloth.
10. Clean the drain pipe with warm water and a mild detergent.

Contact your water supplier to check the water hardness level.

| Water classification: | Clean the water tank every: |
|-----------------------|-----------------------------|
|-----------------------|-----------------------------|

|                 |                        |
|-----------------|------------------------|
| soft            | 75 cycles - 2.5 months |
| moderately hard | 50 cycles - 2 months   |
| hard            | 40 cycles - 1.5 months |
| very hard       | 30 cycles - 1 month    |


### 11.5 Removing and installing door

The oven door has three glass panels. You can remove the oven door and the internal glass panels to clean them. Read the whole "Removing and installing door" instruction before you remove the glass panels.


#### **CAUTION!**

Do not use the appliance without the glass panels.


1. Open the door fully and hold both hinges.

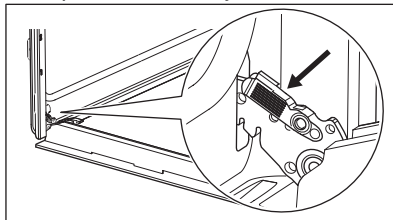

2. Lift and pull the latches until they click.

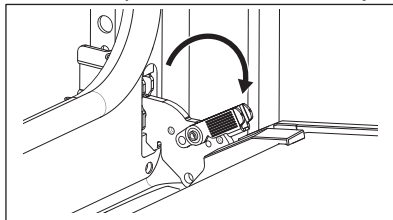


3. Close the oven door halfway to the first opening position. Then lift and pull to remove the door from its seat.

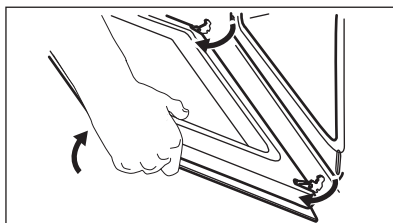


4. Put the door on a soft cloth on a stable surface.

5. Hold the door trim **B** on the top edge of the door at the two sides and push inwards to release the clip seal.

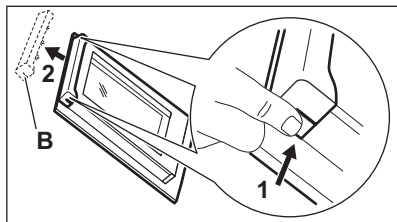

6. Pull the door trim to the front to remove it.
7. Hold the door glass panels by their top edge and carefully pull them out one by one. Start from the top panel. Make sure the glass slides out of the supports completely.

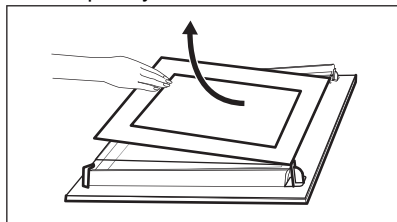


8. Clean the glass panels with water and soap. Dry the glass panels carefully. Do not clean the glass panels in the dishwasher.
9. After cleaning, install the glass panels and the oven door.


If the door is installed correctly, you will hear a click when closing the latches.

Make sure that you put the glass panels (**A** and **B**) back in the correct sequence. Check for the symbol / printing on the side of the glass panel. Each of the glass panels looks different to make the disassembly and assembly easier.

When installed correctly, the door trim clicks.

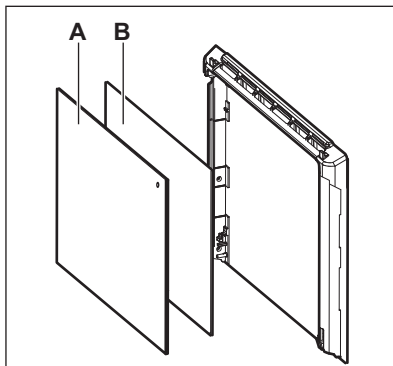

Make sure that you install the middle glass panel in the seats correctly.

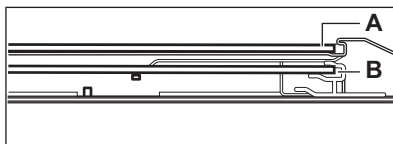

## 11.6 Replacing the lamp

### **WARNING!**

Risk of electric shock.  
The lamp can be hot.

1. Turn off the appliance and wait until it is cold.
2. Disconnect the appliance from the mains.
3. Place the cloth on the oven floor.

### **CAUTION!**

Always hold the halogen lamp with a cloth to prevent grease residue from burning on the lamp.

### Back lamp

1. Turn the glass cover to remove it.
2. Clean the glass cover.
3. Replace the lamp with a suitable 300 °C heat-resistant lamp.
4. Install the glass cover.

## 12. TROUBLESHOOTING

### **WARNING!**

Refer to Safety chapters.

### 12.1 What to do if...

| Problem                                                                                                   | Check if...                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| You cannot activate or operate the appliance.                                                             | The appliance is correctly connected to an electrical supply.                                                                                           |
| The appliance does not heat up.                                                                           | The automatic switch-off is deactivated.                                                                                                                |
| The appliance does not heat up.                                                                           | The fuse is not blown.                                                                                                                                  |
| The appliance does not heat up.                                                                           | Lock is deactivated.                                                                                                                                    |
| The lamp is turned off.                                                                                   | Moist Fan Baking - is activated.                                                                                                                        |
| The lamp does not work.                                                                                   | The lamp is burnt out.                                                                                                                                  |
| The Food Sensor does not operate.                                                                         | The plug of the Food Sensor is fully inserted into the socket.                                                                                          |
| The door gasket is damaged.                                                                               | Do not use the appliance. Contact an Authorised Service Centre.                                                                                         |
| The display shows 00:00.                                                                                  | There was a power cut. Set the time of day.                                                                                                             |
| There is water in the oven interior.                                                                      | There is not too much water in the water tank.                                                                                                          |
|  - indicator is off.      | There is enough water in the water tank. If water starts to leak in the appliance, and the indicator is still off contact an Authorised Service Centre. |
|  - indicator is on.       | There is enough water in the tank. If the tank is full and the indicator is still on contact an Authorised Service Centre.                              |
| The steam cooking does not work.                                                                          | There is no lime residue in the steam inlet opening.                                                                                                    |
| The steam cooking does not work.                                                                          | There is water in the water tank.                                                                                                                       |
| It takes more than three minutes to empty the water tank or the water leaks from the steam inlet opening. | There is no lime residue in the steam inlet opening.<br>Clean the water tank.                                                                           |



If the display shows an error code that is not in this table, turn the house fuse off and on to restart the appliance. If the error code recurs contact an Authorised Service Centre.

### 12.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is located on the front frame of the appliance. It is visible when you open the door. Do not remove the rating plate from the appliance.

We recommend that you write the data here:

Model (MOD.) :

Product number (PNC):  
Serial number (S.N.):

## 13. ENERGY EFFICIENCY

### 13.1 Product Information Sheet and Product Information according to EU Energy Labelling and Ecodesign Regulations

|                                                            |                    |         |
|------------------------------------------------------------|--------------------|---------|
| Supplier's name                                            | Electrolux         |         |
| Model identification                                       | EOC6H76X 949494489 |         |
|                                                            | EOC6H76Z 949494490 |         |
|                                                            | LOC6H76Z 949494491 |         |
| Energy Efficiency Index                                    | 81.2               |         |
| Energy efficiency class                                    | A+                 |         |
| Energy consumption with a standard load, conventional mode | 0.93 kWh/cycle     |         |
| Energy consumption with a standard load, fan-forced mode   | 0.69 kWh/cycle     |         |
| Number of cavities                                         | 1                  |         |
| Heat source                                                | Electricity        |         |
| Volume                                                     | 72 l               |         |
| Type of oven                                               | Built-In Oven      |         |
| Mass                                                       | EOC6H76X           | 33.2 kg |
|                                                            | EOC6H76Z           | 33.0 kg |
|                                                            | LOC6H76Z           | 32.7 kg |

IEC/EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.

### 13.2 Product Information for power consumption and maximum time to reach applicable low power mode

|                                                                                            |        |
|--------------------------------------------------------------------------------------------|--------|
| Power consumption in standby                                                               | 0.8 W  |
| Maximum time needed for the equipment to automatically reach the applicable low power mode | 20 min |

### 13.3 Energy saving tips

Following tips below will help you save energy when using your appliance.

Make sure that the appliance door is closed when the appliance operates. Do not open the appliance door too often during cooking.

Keep the door gasket clean and make sure it is well fixed in its position.

Use metal cookware and dark, non-reflective tins and containers to improve energy saving.

Do not preheat the appliance before cooking unless specifically recommended.

Keep breaks between baking as short as possible when you prepare a few dishes at one time.

#### **Cooking with fan**

When possible, use the cooking functions with fan to save energy.

#### **Residual heat**

When the cooking duration is longer than 30 min, reduce the appliance temperature to minimum 3 - 10 min before the end of cooking. The residual heat inside the appliance will continue to cook.

Use the residual heat to keep the food warm or warm up other dishes.

When you turn off the appliance, the display shows the residual heat.

#### **Keep food warm**

Choose the lowest possible temperature setting to use residual heat and keep the food warm. The residual heat indicator or temperature appears on the display.

#### **Cooking with the lamp off**

Turn off the lamp during cooking. Turn it on only when you need it.

#### **Moist Fan Baking**

Function designed to save energy during cooking.

When you use this function the lamp automatically turns off after 30 sec. You may turn on the lamp again but this action will reduce the expected energy savings.

## **14. ENVIRONMENTAL CONCERNS**

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.









